
4. Loosen the snap screw (d) of the shelf to adjust the shelf position. (Fig.12)

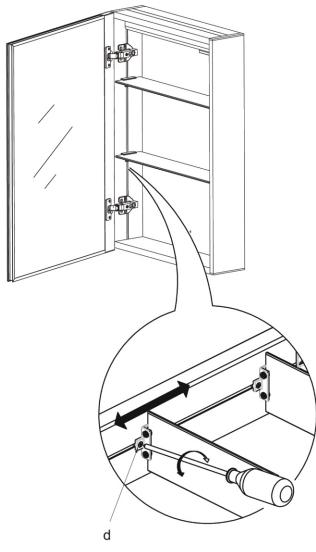


Safety Warning

Fig. 12

• Do not disassemble the door unless necessary

# **Installation Instructions**

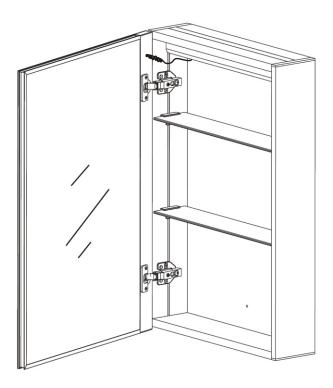







Wall Mounted Mirror Cabinet

- Double layer adjustable tempered glass shelf
- Infrared sensor switch
- Aluminum alloy cabinet
- Double-sided copper-free silver mirror

Note: This specification applies to Single door infrared induction switch LED Aluminum Cabinets.

# Packing List



Expansion plug ø8




Screw M6



Aluminum alloy bar

## Required tools



Tape measure



Spirit level



Electric drill



Screwdriver



Hammer



Drill bit



Pencil

### Note: Please carefully read the following before installing




Warning

- 1. Before installing the product, please carefully read the instructions and operate accordingly;
- 2. Before installing, please turn off the main power switch and ensure that it won't turn on;
- 3. The installation of this product requires that the staff has some electrical knowledge;
- 4. This mirror cabinet is heavy; do not lift or install with single person in order to avoid injury;
- 5. Before installing, please check whether the product is broken, to avoid injury caused by damaged glass;
- 6. Do not clean the product surface with acid and alkaline cleaning agent; please use a damp cloth.
- 7.If the cabinet door is broken and replacement needed, have to unplug the spring coil from cabinet firstly.

- 3.3 If the cabinet door isn't flat (Fig. 10), adjust the distance between the door and the cabinet by adjusting the screw (c) to make the door flat. (Fig. 11)
- Marning: The distance between the door and the cabinet should not be too small, otherwise the door can't be opened and may lead to the door rupture.



Fig. 10

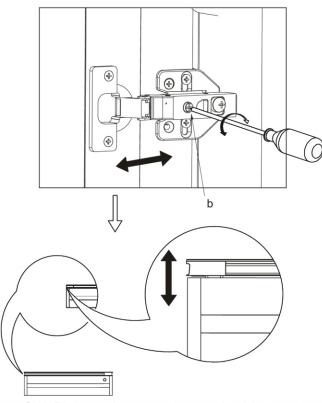

Rotate CW: Distance between door and cabinet reduces Rotate CCW: Distance between door and cabinet increases

Fig. 11



#### 3. Mirror Door Adjustment

3.1 Fix the mirror cabinet, and check if the mirror door is flat; if not (as shown in Fig. 8), adjust the distance of the door opening by adjusting the hinge screw (b) and keep the door level (Fig. 9).


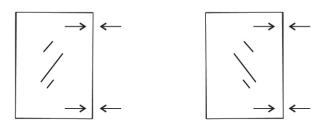


Fig. 8




Rotate CW: Door moves to the center of the mirror cabinet Rotate CCW: Door moves to both sides of the mirror cabinet

Fig. 9

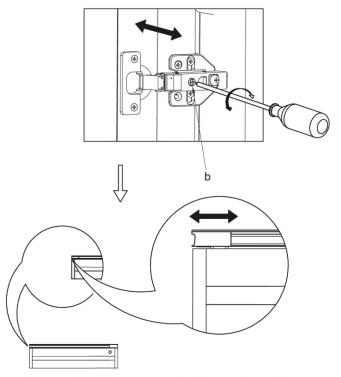

# Installation Steps:

- 1. Fixing the bar
- 1.1Open the product packaging, and check whether the product has any exception or functional damage; if yes, please return it to the dealer.
- 1.2 After selecting the location of the mirror cabinet, check whether the wall is solid, measure the distance of the holes (A, A-1) in the aluminum alloy bar with a tape measure and mark it on the wall with a pencil (Fig. 1).
- 1.3 Drill holes in the marked position with electric drill and ø8 drill bit, and use special ceramic drill if the wall surface is ceramic tile.
- 1.4 Knock the expansion plugs into the holes in the wall with a hammer, and then tighten the screws with a screwdriver to fix the bar, and calibrate the level with a spirit level (Fig. 2).

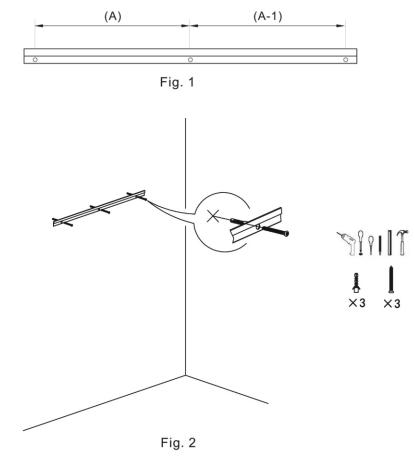

(3)

- 2. Positioning and Installation of Mirror Cabinet:
- 2.1 Attach the mirror cabinet to the bar as shown in Fig. 3, open the cabinet door, and mark on the wall with a pencil (Fig. 4) through the backplane hole (a).
- 2.2 Remove the mirror cabinet, drill the fixing hole in the wall in the marked position, and place the expansion plugs (Fig. 5).
- 2.3 Repeat the operation as shown in Fig. 3 and mount the mirror cabinet to the bar, make sure that the circuit on the wall is not energized and connect the three-core wire reserved on the wall to the three-core wire terminal block on the product (Fig. 6), and then tighten the screws on the backplane.
- 2.4 Finally, turn on the main switch, and test if the switch works normally (Fig. 7).

