



# ***Atmos Traditional***

Thermostatic Concentric  
Mixer Valve with Riser Rail



## **Fitting Instructions**

**IMPORTANT!**

**This Step-by-Step guide should be retained after installation.**

# 1. INTRODUCTION

This booklet contains all the necessary fitting and operating instructions for your MX Thermostatic bar mixer shower.

Please read these instructions carefully. Read through the whole of this book before beginning your installation.

The shower installation **MUST** be carried out by a suitably competent person in the sequence of this instruction book, after reading the instructions.

Care taken during the installation will provide a long and trouble free life from your shower. For the best performance within the specified running pressure range a minimum flow of 5 litres per minute should be available on both inlets.

This mixer valve is designed to operate on higher pressure systems up to a maximum of 5 bar running

pressure. The mixer valve must not be subjected to water temperatures above 80°C. This mixer valve is also suitable for thermal storage, unvented systems and pumped gravity systems.


**IMPORTANT: Before installing with a gas instantaneous water heater, make sure it is capable of delivering hot water at a minimum switch-on flow rate of 3 litres per minute.**

**At flow rates between 3 and 8 litres per minute, the appliance must be capable of raising the water temperature to a minimum of 52°C.**


The water temperature at the inlet to the mixer valve must remain relatively constant when flow rate adjustments are made (refer to the water heater operating manual to confirm compatibility with this mixer valve).

## 2. TOOLS REQUIRED (NOT SUPPLIED)


**NOTE:** Additional plumbing tools and fittings may be required.



Spanner/Wrench




Tape Measure




Screwdriver




Pencil



Power Drill



Suitable Drill Bits



Silicone Sealant



Spirit Level




Safety Eyewear


# 3. PACK CONTENTS

*Please make sure ALL components are included before starting the installation.*

Description	Quantity
Concentric Mixer Valve	1
Handset	1
Riser Rail	1
Riser Rail Fixing Brackets	2
Handset Height Adjuster	1
1.5m Hose + Washers	1
Concealing Plate	1
Wall Outlet	1
Nut Covers	2
Filter Washers	2
Hose Retaining Ring	1
10mm Allen Key	1
Pressure Balance Kit	1
Screw Pack (2 screws + 2 plugs)	1
Fitting Instructions	1
TMV Registration Card	1

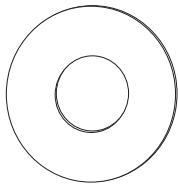

Concealing Plate

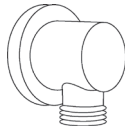

Wall Outlet



Nut Covers




Hose Retaining Ring




Filter Washers



Allen Key

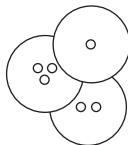

Pressure Balance Kit

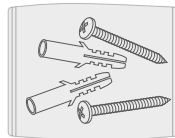

Screw Pack



Fitting Instructions and TMV Registration Card

## 4. PLEASE READ THIS IMPORTANT SAFETY INFORMATION

---

Products manufactured by the MX Group are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.



Layout and sizing of pipework **MUST** be such that when other services are used, pressures at the shower control inlets do not fall below the recommended minimum.



**DO NOT** choose a position where the shower could become frozen.



**DO NOT** connect this mixer valve to any form of tap or fitting not recommended by the manufacturer.

Conveniently situated service valves in each inlet supply **MUST** be fitted as an independent method of isolating the shower should maintenance or servicing be necessary, these valves **SHOULD NOT** restrict the flow.



**DO NOT** operate the shower outside the recommended temperatures and pressures stated in this guide.

Always test the water temperature with your hand before entering the shower.



**NOTE: As a competent person installing this shower you should ensure that all users are very conversant in its operation.**

The British Burns Association recommends 37°C to 37.5°C as a comfortable bathing temperature for children. In premises covered by the Care Standards Act 2000, the maximum mixed water outlet temperature is 41°C.



**Metal surfaces on the hot supply may become hot during operation.**

Arrange to have the mixer valve regularly serviced by a suitably qualified person.

The handset must be regularly cleaned to remove scale and debris.

## 5. SITE REQUIREMENTS

The installation must be in accordance with Water Regulations Advisory Service ([www.wras.co.uk](http://www.wras.co.uk)).

Minimum running water pressure: 0.1 bar, but will operate better at a minimum of 0.5 bar.

Maximum running water pressure: 5 bar. Maximum static water pressure: 10 bar.

For your shower to perform well you should ensure that the pressure is as specified and a minimum flow of 5 litres per minute is available at both hot and cold inlets.

If the water supply is fed by a gravity system then the supply pressure should be verified to ensure the conditions of use are appropriate for the valve.

**NOTE: Water Regulations requires the handset to be 'constrained by a fixed or sliding attachment so that it can only discharge water at a point not less than 25mm above the spill over level of the relevant bath, shower tray or other fixed appliance'. A double check valve, or similar, MUST be fitted in the supply pipe work to prevent back-flow.**

**The pressure at both the hot and cold water supplies to the mixer valve should be the same, and the installer should ensure that the flow is not**

**affected by other taps elsewhere in the house. It is very important that for use in any mains pressure systems an expansion tank and a pressure reducing valve has been fitted to ensure the pressure does not exceed 5 Bar.**

**This should be confirmed by the installation engineer or competent person before installation.**

### WATER TEMPERATURE REQUIREMENTS

Maximum hot water temperature = 80°C,  
Recommended maximum = 65°C.

Minimum hot water temperature = 55°C

Maximum cold water temperature = 20°C

### TEMPERATURE ADJUSTMENT RANGE

The mixed water temperature can be adjusted from cold through to hot. There is a safety stop preset at a set temperature of about 38°C. Always test the water temperature prior to using the shower.


In the event of failure of cold water system, the mixer valve automatically reduces the flow of hot water to prevent scalding. It will only operate again once the flow of cold water has been resumed.

## 6. SITING OF THE MIXER VALVE

Position the mixer valve so that all controls can be comfortably reached whilst using the shower.

The height of the showerhead should suit all user's requirements. When suspended from the hose retaining ring, the showerhead should be a minimum of 25mm above the spillover level of the bath or shower tray.

**NOTE: Easily accessible suitable service valves (complying with Water Regulations Advisory Service [www.wras.co.uk](http://www.wras.co.uk)), MUST be fitted as close as practical to the valve, on the hot and cold water supplies to the shower as an independent means of isolating the water supplies should maintenance or servicing be necessary. These valves should not restrict the flow.**

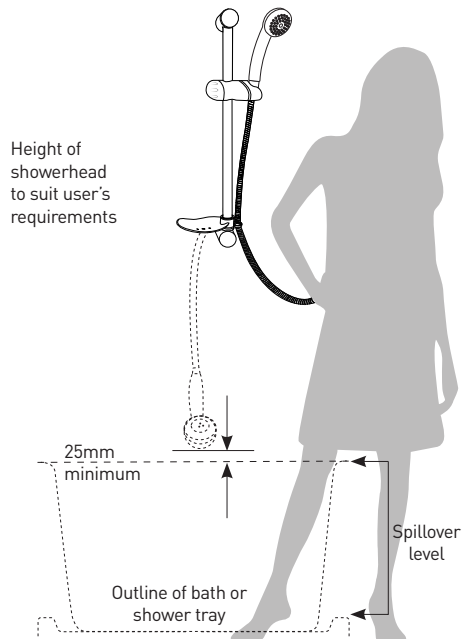

## 7. IMPORTANT INSTALLATION INFORMATION

Before proceeding with the installation check all the components in the component list are present.



### WARNING!

The shower **must not** be positioned where it will be subject to freezing conditions.

The mixer valve should be fitted only after all the pipework has been installed.

**DO NOT** modify or use jointing compounds on any of the pipe fittings. **DO NOT** solder fittings near the mixer valve as heat can damage the valves seals. Always flush the system prior to installing the valve.

Before installing, make sure the mixer valve is kept in a clean place to prevent any debris getting into the openings while fitting the pipework.

■ The mixer valve is suitable for installation on a solid wall, a stud partition wall, dry lined wall or fixing to a cubicle or panel.

■ The water pipes should be securely attached within the wall or panel to support the mixer valve and prevent movement or water noise after installation.

■ The mixer valve hot water inlet has a red symbol next to the inlet and must be on the left hand side. If the mixer valve you are fitting is with a riser rail the outlet should point down, if the mixer valve is for an overhead the outlet should point upwards.

■ The mixer valve is designed to work at the same hot and cold water pressures. If this is not the case a flow controller (disc with small holes) can be fitted to the higher pressure supply to the valve. This is best done by testing each one to find out which gives the best results.

■ The mixer valve will be installed in such a position that the maintenance of the TMV and its valves and the commissioning and testing of the TMV can be undertaken.


Before fitting the mixer valve flush out the pipework in accordance with Water Regulations Advisory Service ([www.wras.co.uk](http://www.wras.co.uk)).

## 8. PRESSURE BALANCING (IF SUPPLIED)

The thermostatic mixer valve is designed to work best when the feed pressures of both hot and cold water are the same. If there is a difference in pressure it will cause the flow of water through the valve to pulse rather than being a steady flow. This pulsing can be reduced by putting one of the metal disks with holes into the higher pressure feed to the valve. This restricts the flow and reduces the pulsing.

To maximise the volume of water through the valve the disk with the most holes should be tried first. If this does not work the others should be tried until a satisfactory result is obtained.


**If the water pressures to hot and cold are the same these disks do not need to be used.**

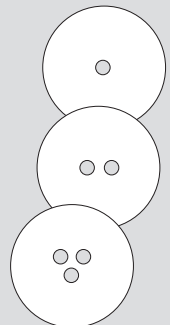

## 9. FITTING THE MIXER VALVE EXPOSED OPTION


**IMPORTANT:** Ensure that you have read through section 7. IMPORTANT INSTALLATION INFORMATION before starting to fit the mixer valve.

1. Your thermostatic concentric mixer valve is set up in the factory so that a shower hose can be fitted. This means that when the valve is fitted with the hot water coming in from the left hand side, indicated by the red spot, the water outlet is on the bottom of the valve and has a 1/2" BSP threaded male outlet (Fig 1).

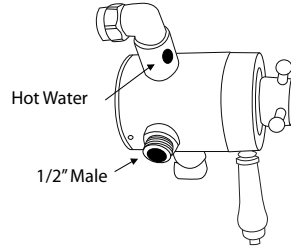

1


2. The supply pipework can be plumbed from above or below but must finish at the suitable connections which should be at 155mm centers. Connect the 15mm pipework using standard compression nut and olives supplied with the mixer valve (Fig 2).




2

**NOTE:** Make sure the mixer valve is kept in a clean place to prevent rubbish etc, getting into the openings while fitting the pipework.


3. Complete the fitting of the pipework and the tiling leaving the pipework as shown. Leave 155mm (+ or - 5mm) between centers and about 30mm out from the finished surface (Fig 3).



4. Remove the back plate from the mixer valve by removing the retaining grub screws. Put the plate in the centre between the feed pipes and mark the screw positions, check this fits by holding the valve in position. Drill plug and screw the back plate to the wall (Fig 4).

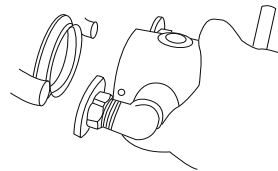

5. Fit the two flat valve nut covers to the nuts on the mixer valve and position the mixer valve onto the two water feed pipes and onto the wall bracket. To prevent moisture entering the wall put some silicone on the underside of the mixer valve nut covers. Carefully tighten up the compression nuts to hold the mixer valve in place (Fig 5).

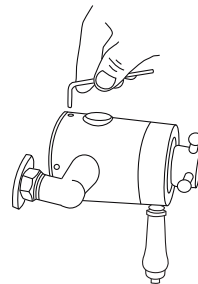

6. Make sure the mixer valve outlet is pointing in the correct direction (with the hot feed on the left side marked with a red indicator). Replace the locking grub screws to hold the mixer valve onto the wall plate.



**CAUTION**



Check there are no hidden cables or pipes before drilling holes for wall plugs.


Exercise great care when using power tools near water.

The use of a residual current device (RCD) is recommended.

# 10. FITTING THE MIXER VALVE CONCEALED OPTION


**IMPORTANT:** Ensure that you have read through section 7. IMPORTANT INSTALLATION INFORMATION before starting to fit the mixer valve.

1. The fitting of the mixer valve is essentially the same as described for the exposed option, except that the mixer valve is fixed to the wall between 50mm and 70mm below the finished surface of the shower. A circular hole between 150mm and 173mm should be enough to fit the mixer valve (Fig 1).

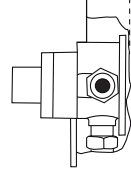

1


2. The supply pipework can be plumbed from above or below but must finish at the suitable connections which should be at 155mm centers. Connect the 15mm pipework using standard compression nut and olives.

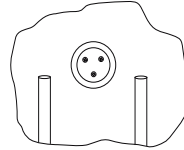

2


**NOTE:** You should measure the distance between the outlets on the mixer valve you are fitting to determine the exact distance.

3. Complete the fitting of the pipework and the tiling leaving the pipework as shown. The wall plate should be attached firmly between 50mm and 70mm below the finished surface. Remove the back plate from the mixer valve by removing the retaining screws. Put the plate in the centre between the feed pipes and mark the screw positions, check this fits by holding the mixer valve in position. Drill plug and screw the back plate to the wall (Fig 2).

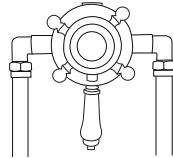

3


4. Position the mixer valve onto the two water feed pipes and onto the wall bracket. Tighten up the compression nuts to hold the mixer valve in place (Fig 3).

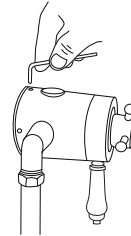

4

**NOTE:** Make sure the mixer valve outlet is pointing down and the hot feed is onto the left side marked with a red indicator.

5. Replace locking screws to hold the mixer valve onto the wall plate (Fig 4).

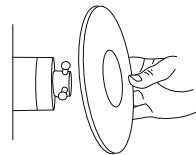

5

6. A pipe must be fitted from the outlet of the mixer valve to the location of where you wish to position the wall outlet. This pipe must have a 1/2" female connection attached into which the wall outlet can be fitted.

**NOTE:** Once the mixer valve and wall outlet are fitted, prior to fitting the trim plate disc ensure all connections are watertight. This can be done by reconnecting the water supplies and checking the connections when running the shower and when the shower is off.

7. The trim plate disc is fitted by unscrewing the handles and pushing it onto the mixer valve until flush with the tiles (Fig 5).


8. Fit riser rail as described in the riser rail fitting instructions. Silicone should be used to seal the outside edge of the trim plate disc to the tiles.

**NOTE:** Sufficient space should be left behind the trim plate disc to allow access to the elbows for servicing.



# 11. FITTING THE RISER RAIL AND HANDSET


1. Establish height of riser rail to suit users requirements (Fig 1).
2. Disassemble the riser rail so you are left with the tube only. Site riser rail on wall and with the use of a spirit level ensure rail is vertical.
3. Mark the hole position on the wall measuring from the pre-drilled holes in the riser rail. Drill hole in wall and insert wall plug, screw lower bracket to wall (Fig 2).

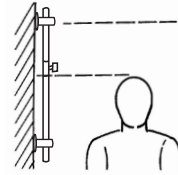


1

Drill hole in wall for the upper bracket, add wall plug then screw wall bracket plate to wall.


4. Reassemble height adjuster onto riser rail ensuring cone hole is the correct way around to hold the handset (Fig 3).
5. Slide riser rail through top bracket pushing higher than necessary. Screw wall bracket to bottom wall bracket plate. Slide riser rail tube through bottom bracket then fix end cap to both brackets.
6. To fit the handset, connect one end of the double interlock hose to the outlet on the mixer valve, making sure that the sealing washer is in place.
7. Screw the remaining end of the double interlock hose to the handset making sure the sealing washer is in place, then locate the handset into the handset height adjuster (Fig 4).



2

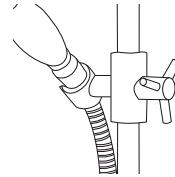

3

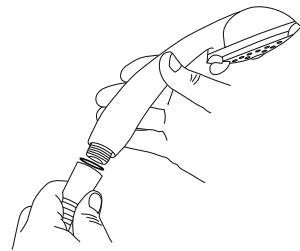

4

**NOTE:** It is the conical end of the double interlock hose which grips into the handset height adjuster. The handset will not fit in the height adjuster without the double interlock hose attached.



## TIPS

- A piece of insulating or masking tape applied to the wall before marking out the fixing holes will help stop the drill from wandering, particularly on tiled surfaces.



## CAUTION



Check there are no hidden cables or pipes before drilling holes for wall plugs.

Exercise great care when using power tools near water.

The use of a residual current device (RCD) is recommended.

# 12. COMMISSIONING AND ANNUAL MAINTENANCE TESTING

Before commissioning the following checks and tests need to have taken place:

- All the pipe work has been flushed through before fitting the valve and there are no leaks.
- The supply pressures and temperatures are checked and all are in the range specified in these instructions.
- The isolation valves and strainers are fitted and clean of any unwanted material and do not restrict flow.
- The valve has been fitted to the pipework with all connections correctly tightened.

## COMMISSIONING PROCEDURE

1. Ensure both isolation valves are fully open. Turn the temperature control to cold and turn the flow on.

**Check the temperature is at the required minimum.**

2. Rotate the temperature controller gradually until it reaches the preset stop. Let it flow until the hot water has reached the valve and the temperature has stabilized.

**Check the temperature is 38°C +/-2°C.**

This is the factory preset. If the valve does not operate properly check and confirm that the hot and cold water supplies are fitted to the correct inlets.

3. Override the temperature stop button by pressing the button and rotate to maximum being careful to avoid scalding.

**Measure the temperature.**

4. The valve should then be checked to confirm the water isolation performs correctly. Run the valve at the 38°C stop position.

**Check the water temperature.**

5. Turn off the feed of cold water using the isolation valve.

**The water flow should fall to a very low flow, (possibly only a drip) after a few seconds.**

6. Collect the water after 5 seconds and 30 seconds. **Measure the temperature – it should be below 46°C +/- 2°C .**

7. Turn on the cold water again and it should return after a few seconds to stabilise to 38°C +/- 2°C.

## TEMPERATURE SETTING ADJUSTMENT

**NOTE:** Adjustment of the temperature settings is only to be carried out by a competent TMV engineer as it is a technically difficult operation in which the valve can easily be broken.

1. Remove the handle on the temperature controller, (noting carefully the assembly of the components).
2. Rotate the internal stops a few degrees in the required direction.
3. Reassemble.
4. All the commissioning checks should be done again to ensure it now meets the required specification before using the shower.



**Before use, ensure that you instruct all users in the safe operation of the shower as outlined in this document.**

# 13. TROUBLESHOOTING AND FREQUENTLY ASKED QUESTIONS

---

If the performance of your shower deteriorates in service please follow the self help items detailed below before seeking professional advice from the installer. If the actions below fail to restore the shower performance you should initially contact the person or company that installed the shower.

---

## **Q. Water too HOT.**

**A.** Six possible reasons:

- 1. Temperature control is not correctly commissioned.**  
Adjust the temperature control - this is only a job for a suitably qualified person.
  - 2. Not enough cold water flowing through shower.**  
Turn temperature control anti-clockwise.
  - 3. Increase in the ambient cold water temperature.**  
Turn temperature control anti-clockwise.
  - 4. Cold water supply blocked.**  
Turn off shower and consult a competent plumber.
  - 5. High volume of cold water drawn off elsewhere.**  
Reduce the simultaneous demand from the supply.
  - 6. Cold water filter blocked.**  
Remove valve and clean filters.
- 

## **Q. Water does not flow or shower pattern collapses when another outlet is turned on.**

**A.** Check the following:

- 1. Water supplies cut off**  
Check elsewhere in house and if necessary contact local water company.
  - 2. Blockage in pipework.**  
Turn off shower and consult a suitably competent plumber.
  - 3. Valve filters blocked by debris in water supply.**  
Remove valve and clean filters.
  - 4. Showerhead blocked.**  
Clean Showerhead.
  - 5. System not capable of supplying multiple outlet at the same time.**  
Reduce simultaneous demand. Check stop/service valves are fully open. Check if enough water pressure.
- 

## **Q. Water too COLD.**

**A.** Nine things to check:

- 1. Temperature control is not correctly commissioned.**  
Adjust the temperature control - this is only a job for a suitably qualified person.
  - 2. Not enough hot water flowing through shower.**  
Turn temperature control clockwise.
  - 3. Hot and Cold supplies connected the wrong way round.**  
Change water feed supply so that the hot water is going to the feed marked with a red dot.
  - 4. Decrease in the ambient cold water temperature.**  
Turn temperature control clockwise.
  - 5. Hot water filter blocked.**  
Remove valve and clean filters on the inlet.
  - 6. Insufficient hot water supplies from the heating system.**  
Make sure the hot water is available by trying a hot water tap elsewhere in the house.
  - 7. Hot water supply blocked or restricted.**  
Make sure the hot water is available by trying a hot water tap elsewhere in the house.
  - 8. Pressure in excess of max recommended.**  
Turn off shower and consult a suitably competent plumber.
  - 9. Combi boiler may need the correct pressure/flow setting to start heating water when the valve is turned on.**  
Contact your boiler supplier.
- 

## **Q. Shower controls noisy whilst in use.**

**A.** Running pressure in excess of maximum recommended – fit reducing disc to outlet of valve.

---

## **Q. Shower will not shut off.**

**A.** Flow control cartridge worn – renew flow control cartridge.

# 14. THE MARLETON CROSS LTD (MX GROUP) - 5 YEAR GUARANTEE

Marleton Cross Limited (MX Group) hopes you are satisfied with your purchase and in the unlikely event that you encounter a problem which is caused exclusively by the MX Group manufactured product (the "product") we will take responsibility on the terms set out here.

We guarantee this product, in the following terms, for a period of 5 years, from the date of delivery, against mechanical defects arising from faulty materials or from poor workmanship, providing the product has been:

Installed in accordance with the fitting instructions (oral or written), technical information supplied and/or associated advertising;

Used strictly in accordance with all our instructions (oral or written), associated advertising and technical data (including product information and specification sheets) current at the time of purchase and good working practice.

The MX Group at its discretion undertake to repair or replace without charge, provided the product has been properly installed, maintained and operated in accordance with the operating instructions.

This product must not be modified, repaired or taken apart except by a person authorised by the MX Group.

## What is not covered by this guarantee

1. Any product found to be defective during this period, as the result of misuse or damage, or the effects of scaling, will not be covered by this guarantee.
2. Breakdown due to:
  - a) Use other than domestic use by you or your resident family
  - b) Wilful act or neglect
  - c) Any malfunction resulting from the incorrect use or quality of water or incorrect setting of controls; and
  - d) Faulty installation.
3. Repair costs for damage caused by foreign objects of substances or the inappropriate use of jointing compounds or blow torches.
4. Total loss of the product due to non-availability of parts or other reason, (MX Group will maintain stocks of spare parts for repair for at least 5 years from end of product line to cover this guarantee).
5. Compensations for loss of use of the product or consequential loss of any kind.
6. Call out charges where no fault has been found with the appliance.
7. The cost of repair or replacement of pressure relief devices, showerheads, hoses, riser rails and/or wall bracket, tiles, cubicles or any other parts installed at the same time.
8. The cost of routine maintenance, adjustments, overhaul modifications or loss or damage arising there from, including the cost of repairing damage, breakdown, malfunction caused by corrosion, furring, pipe scaling, limescale, system debris or frost.
9. Units purchased and installed other than in the United Kingdom.

## Limitations

1. This guarantee lasts for a single continuous period of 5 years from the date of delivery by MX Group to you the customer.

2. This guarantee is personal to the original purchaser of the product and is not transferable.
3. Original proof of purchase(s) must be shown for any claim under this guarantee.
4. This guarantee does not cover any products that have been modified, altered or transformed in any way.
5. This guarantee applies to an original installation in accordance to our fitting instructions and does not cover previously installed products (showroom displays etc) or products that have been moved from their original installation position for any reason.
6. This guarantee applies only to manufacturing or material defects. It does not apply to normal wear and tear, accidental damage, inappropriate use (including inappropriate cleaning) or other events outside the manufacturer's control.
7. This guarantee applies only to the product itself and any liability on behalf of MX Group is limited to the cost of the product.
8. If a product is deemed to be of faulty manufacture MX Group will at their discretion replace or repair the product. Any related consequential loss or damage is excluded.
9. No claim will be accepted if a product is installed with a fault (ours or otherwise) that would have been clearly evident before installation.
10. We make no representations, and exclude any and all liability, in respect of any third party products or cares supplied by way of extensions to this guarantee.

## Liability

1. Except as required or agreed by us, you will not in any circumstances return any of the product to us, and where the property in any of the goods returned to us has passed to you, they will nevertheless remain your property and at your risk unless we have agreed otherwise in writing before their return.
2. Except as stated above, we will not be liable for any direct, consequential or other loss, damage or injury suffered or incurred by you, and you will indemnify us fully against any claims made by third parties, in respect of the goods or otherwise arising from the contract.
3. Nothing contained in the contract will be treated as excluding or restricting any liability on our part for death or personal injury resulting from our negligence.
4. Except as stated above, and to the fullest extent permitted by law, all conditions, warranties and representations, whether express or implied, statutory or otherwise in relation to the product (other than such as relate to title to the product) are excluded.
5. You acknowledge that our prices for the goods reflect these Terms and Conditions, and accordingly that you accept the above limitations on and exclusions of liability in exchange for those prices.
6. When providing information to MX-Group you understand that you are doing this subject to our terms and other policies (including data protection) we have in place from time to time, copies of which are available on our website [www.mx-group.com](http://www.mx-group.com) or on request as per the MX Group contact details given herein.
7. This guarantee does not affect your statutory rights.

## 15. SERVICE POLICY

---

In the event of you needing to contact the MX Group Customer Service Department, the following procedure should be followed:

- 1.** Before telephoning on 0845 505 2211 the MX Group Customer Service Department you should ensure you have the model number (printed on the valve), the date and proof of purchase, your contact details and the postcode where the unit is installed.
- 2.** The MX Group Customer Service Department will be able to tell you whether the fault can be simply rectified by the provision of a replacement part or arrange an on site visit by a Qualified Service Engineer.
- 3.** If a service call is required it will be booked and the date of the call confirmed. You or a representative (over the age of 18 years) must be present during the entire engineers visit. The engineer will not be able to repair or replace or advise on parts or products not supplied by MX.
- 4.** In the event of a service call aborted by you or where a call has been booked under our guarantee but failure is not related to the product supplied by MX then a charge will be made.
- 5.** If the product is no longer covered by the guarantee, a charge will be made for the site visit and for any parts supplied.
- 6.** Service charges are based on the account being settled when work is complete, the engineer will then request payment. If this is not made to the service engineer or settled within ten working days, an administration charge will be added.

## 16. SPARE PARTS

---

In the event that parts or maintenance is needed outside the guarantee MX will endeavour to help with this. Spare parts codes are given in the fitting instructions. By calling the Customer Service Department on 0845 505 2211 with the part number, they will be able to quote you to supply these parts, usually via our spares distributor.

# NOTES

---

# NOTES

---

**Customer Care Department**  
**Telephone: 0845 505 2211**  
**9.00am - 5.00pm Monday to Friday**

6751L KL/JULY2016

---



**Marleton Cross Limited Trading as The MX Group**

Alpha Close, Delta Drive, Tewkesbury Industrial Estate, Tewkesbury, Gloucestershire GL20 8JF  
Tel: 01684 293311 Fax: 01684 293900 Email: [sales@mx-group.com](mailto:sales@mx-group.com) [www.mx-group.com](http://www.mx-group.com)

**CUSTOMER CARE: 0845 5052211**

**TRADE DESCRIPTIONS ACT**

Variations in terms of colour finish, materials and all other aspects of appearance may occur on occasions, either through non-availability of materials or due to our policy of continuing technical improvement. Therefore the Company reserves the right to change specification or withdraw products from this list without prior notice being given.