

WS0370WC

Wall mounted spout

INTRODUCTION

Please read these instructions carefully and keep in a safe place for future reference.

General Installation Requirements

The installation must comply with regulations of the Local Water Authority as contained in their bylaws. All of the taps in this range are double flow (the hot and cold water are separated) and should therefore be supplied with hot and cold water at balanced pressures, both from the tank or both from the mains (via a combination boiler for example). If the taps are not supplied at balanced pressures then the tap will not function correctly. It will also be necessary to fit non-return valves on both hot and cold feeds. It is very important that all pipe work is flushed thoroughly after installation to avoid damaging the ceramic disc.

Standard specifications

1. Recommended working pressure: 1 Bar
2. Maximum test pressure: 5 Bar
3. Maximum hot water temperature : 80 °C
4. We recommend installing filters to this product.
5. Warning:
 - if the above mentioned conditions (see points 1,2,3,4) are not observed, the product may not correctly work or not work at all.
 - On receipt of this product the chrome finish must be checked for blemishes. Defects notified after fitting may be regarded as damage resulting from the installation process, incorrect maintenance or misuse and as a result not be claimable under the warranty.

Approvals


All products are manufactured using materials tested and approved under the Water Bylaws Scheme and comply with requirements of British Standard 5412:1996 where applicable.

Preparation and bylaw requirements

These taps are double flow. Water bylaws require that where the hot water is supplied from a tank and cold from the mains, non return valves are fitted on both hot and cold pipes as close as possible to the tap. These are not supplied. Where combination boilers are fitted it is only necessary to shut off the incoming mains and turn the boiler off and non return valves are not required.


WARNING

- Installation Performed By Qualified Personnel Only !
- Clean Carefully The Water Pipes Before Installing The Tap.

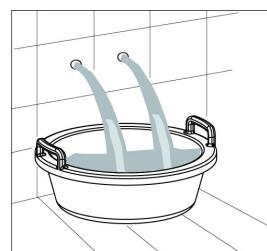

DIMENSIONS

WS0370WC

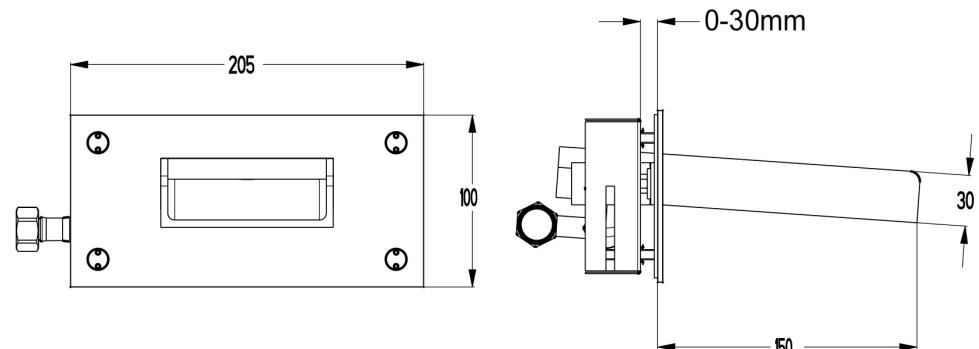

Note: all dimensions in millimetres


CROSSWATER

The chrome plate we use on our taps is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and some strong substances such as household cleaners, cloth. All finishes are vulnerable to acid attack and some disinfectants, denture cleaners, hair dyes, wine making and strong solvents can cause the surface to go black or peel.

WS0370WC

CLEANING

CROSSWATER

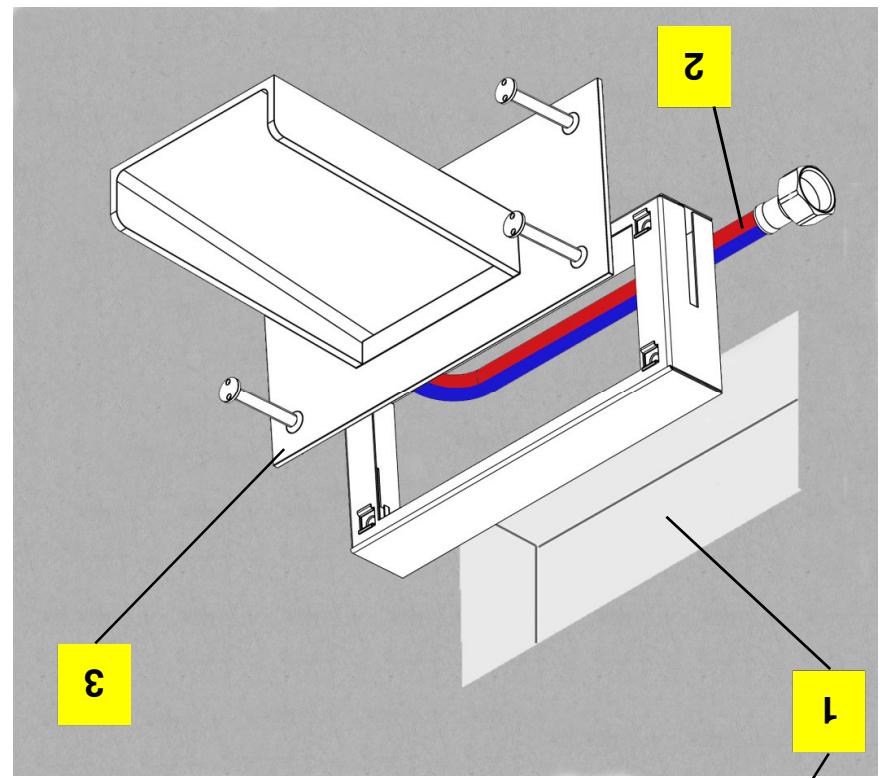


- Decide on a suitable position for the Mixer where all users can operate. Mark an opening sufficient to accommodate the Mixer body, whose dimensions like the template (1).
- Screw up the flexi tail (2) to the mixer body, taking care to tighten well.
- Connect the flexi tails (2) at the water supply.
- Screw the plate (3) using the special supplied key.

Remember to turn off the mains water supply before connecting to any existing pipe work. Flush the piping with plenty of water prior to installation.



Fitting isolating valves to the inlet feeds is recommended for ease of maintenance. Where combination boilers are fitted it is only necessary to turn off the boiler and shut off the incoming mains. Always remember to open the cold storage tank and pipes are empty (the hot water storage cylinder always remains full).

First shut off your water heating system then, with you remains stopcock closed, open the lowest hot and cold taps in the house and allow to run until the cold storage tank and pipes are empty (the hot water storage cylinder always remains full).

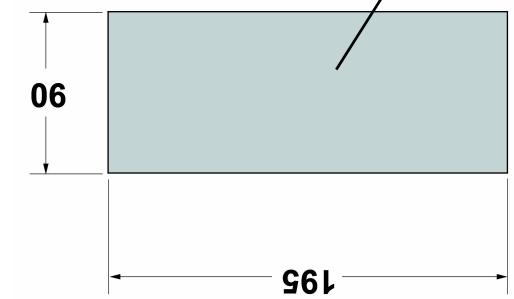

WS0370WC

INSTALLATION

INSTALLATION