


Riser Rail Basket and Soap Basket


Please follow these fixing and care instructions to ensure that your product is fitted safely and that it retains its high quality finish. Please retain this leaflet for future reference.

The following instruction leaflet is for;

QM261441 Riser Rail Soap Basket QM261041 Riser Rail Basket

Fixing Pack Contents

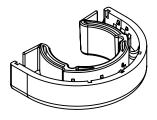



A. Securing Clip

B. Cover Plate







C. 19mm - 21mm Collet

D. 22mm - 24mm Collet


E. 25mm - 26mm Collet

NO TOOLS REQUIRED!


Product Care

To retain the best quality finish, clean product regularly with a soft damp cloth. Do not use abrasive or chemical cleaners, as these will damage the product. Do not strike the product with hard or sharp objects. Do not overload the baskets.


 1. Measure the diameter of the riser rail and choose the most appropriate Collet to fit your rail. Make sure the Collet is in the correct orientation by ensuring that the two notches are facing upwards and the slot is positioned at the back of the riser rail.
NOTE: If you are having trouble sliding the securing clip onto the Rubber Collet, place the Collet in hot water to increase its flexibility. This will make the installation easier.

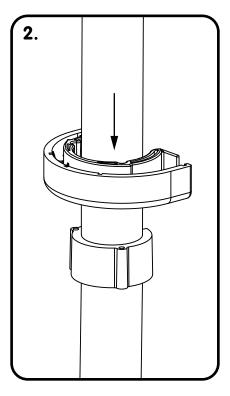


2. Attach the Securing Clip to the riser rail and slide it over the Collet until it is tightly fixed in the desired position on the rail.

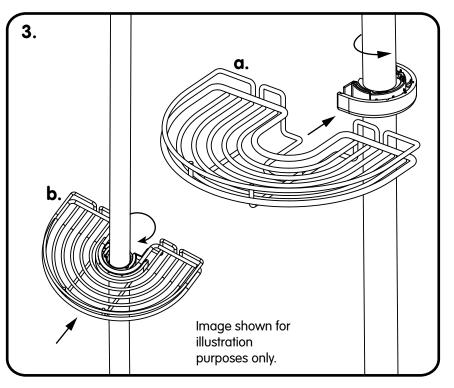

3. Place the basket over the Securing Clip. It may be necessary to rotate the Securing Clip through 90 degrees to allow the clip to pass through the back of the wire basket.

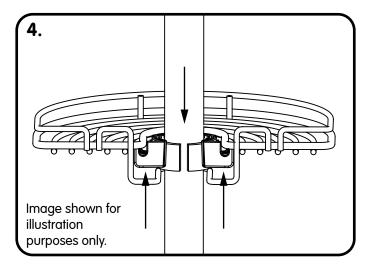

4. Align the 'D' shape wire profile of the basket with the 'D' shape recess in the Securing Clip and press the two components together until they click into place.

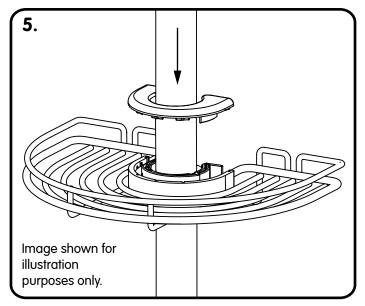

5. Finally, align the Cover Plate with the Securing Clip and press together to finish the assembly.

For details of the other items in the Croydex range please visit our website: www.croydex.com Croydex, Central Way, Andover, Hampshire, SP10 5AW, UK Tel: +44 (0) 1264 365881 Fax: +44 (0) 1264 356437 E-mail: info@croydex.co.uk WMA 108 R02