




D-SHAPE TOILET SEAT

SOFT CLOSE & QUICK RELEASE TOILET SEAT

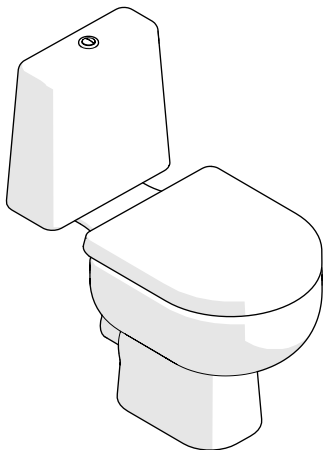

CONTACT DETAILS

UK: Croydex, Central Way, Andover,
Hampshire, SP10 5AW, UK

EU: MIL, Unit 8 Purcellsinch Ind Est,
Dublin Road, Kilkenny, R95 HP71, Ireland

Tel: +44 (0)1264 365881

Email: info@croydex.co.uk

www.croydex.com

**ALL PRODUCT DIMENSIONS DETAILED IN THIS
INSTALLATION AND MAINTENANCE MANUAL ARE
APPROXIMATE**

**ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR
REFERENCE ONLY. COMPONENTS SUPPLIED WITH
INDIVIDUAL PRODUCTS MAY DIFFER**

Always follow the instructions provided to ensure that your product is assembled
and fitted safely, and retains its high quality finish.

ALWAYS RETAIN THIS MANUAL FOR FUTURE REFERENCE




**ALWAYS CHECK THE PACKAGING FOR FIXINGS AND PARTS BEFORE
THROWING AWAY AND RECYCLING.**


**ENSURE YOU HAVE ALL THE FIXINGS AND PARTS BEFORE ATTEMPTING TO
ASSEMBLE OR FIT THIS PRODUCT.**

SAFETY & PRODUCT CARE


1. To retain the best quality finish, clean product with a soft cloth and a mild soap solution applied directly to the cloth.
2. **DO NOT** use abrasive or chemical cleaners as they may damage the surface of the toilet seat or hinges.
3. **DO NOT** force the seat down as this can cause damage to the product and its function.
4. Ensure the seat is still locked in place after cleaning. In some instances, the quick release button may be activated when cleaning the toilet seat surface.
5. To remove the flexi fit bracket (B) at the end of its use, use a plastic scraper to carefully lever the hinge away from the toilet pan.

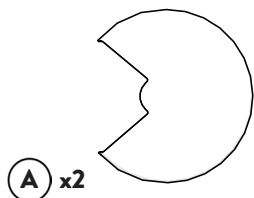


(A) x2
CHROME CAP

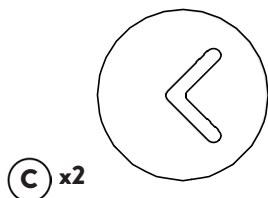


(C) x2
SUPPORT COVER

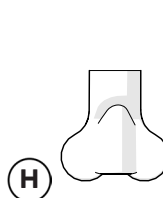


(H)
NUT KEY

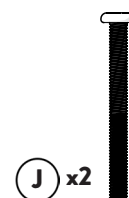


(J) x2
SCREW

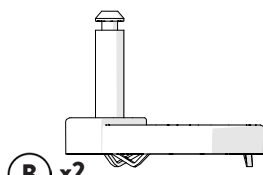


(B) x2
FLEXI FIT BRACKET

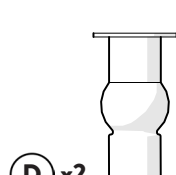


(D) x2
RUBBER PLUG




(E) x2
CONICAL
WASHER



(F) x2
WASHER

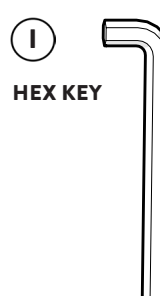

(I)
HEX KEY






(K)
SPACER



(G) x2
NUT


INSTALLATION

1. Remove the old seat from the pan and clean the surface around the fixing holes.
2. Ensure the surfaces around the fixing holes are completely dry and free of any dust or debris before beginning the installation.
3. To ensure you do not lose any dropped components in the toilet pan, place cling film over the toilet bowl.
4. **COMPLETE STEPS 4, 5 & 6 BEFORE REMOVING THE HYGIENE FILM** from the toilet seat. Position the seat over your pan to ensure the shape and profile of the toilet seat matches your toilet pan. (See Fig. 1)
5. Align the front edge of the toilet seat with the front of your toilet pan. Hold your hand at the back of the toilet seat and using it as a pivot, raise the toilet seat. (See Fig. 2)
6. The seat should be able to rest backwards at an angle. If it cannot rest at an angle and can only rest vertically, the seat **WILL NOT** to function correctly. (See Fig. 3A & 3B)

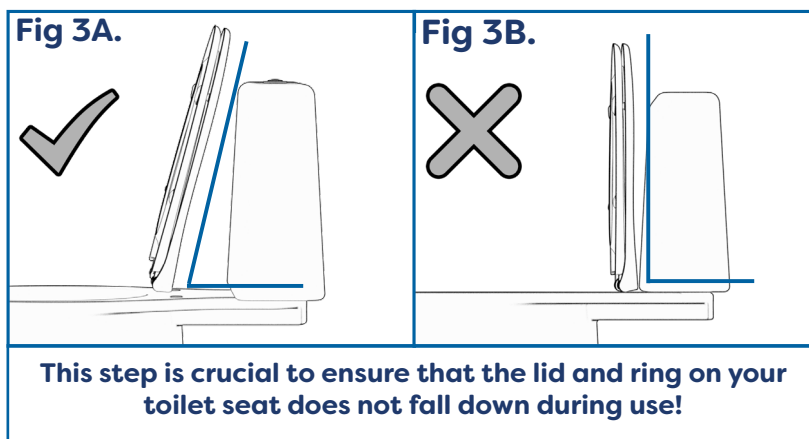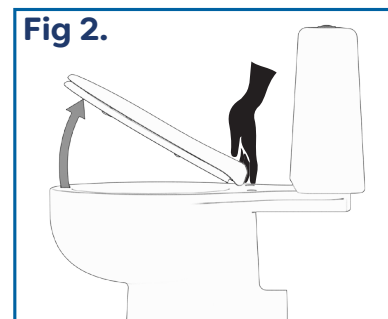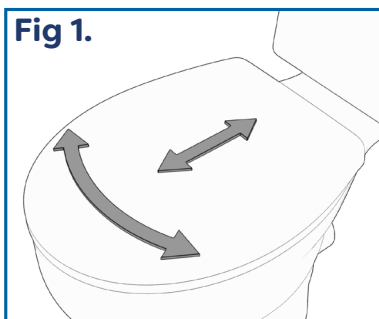

7. **ONLY ONCE YOU ARE SATISFIED THAT THE TOILET SEAT WILL FIT YOUR TOILET PAN SHOULD YOU REMOVE THE HYGIENE FILM.**
8. Remove the support covers from the underside of the flexi fix brackets (B) to reveal the adhesive tape and red protective film. (See Fig. 4)
9. Carefully peel off the red backing tape from the adhesive pad on both flexi fit bracket (B) assemblies. (See Fig. 4)

Fig 4.

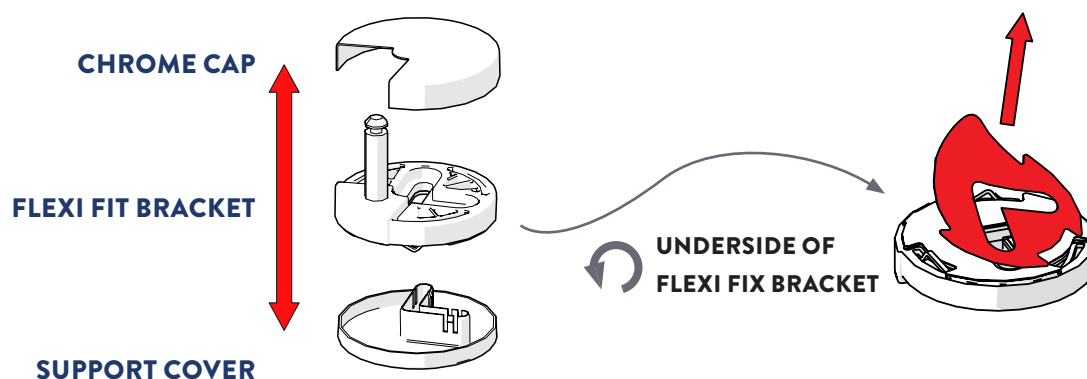

10. Identify your toilet pan style. **Loosely** install the flexi fix bracket (B) through the mounting holes using either bottom fix installation (See Fig. 5) or top fix installation (See Fig. 6). **DO NOT COMPRESS THE BRACKETS, THIS MAY RESULT IN THE TAPE STICKING BEFORE YOU ARE SATISFIED WITH THEIR POSITION.**


CHOOSE BETWEEN

BOTTOM FIX INSTALLATION

This installation is designed to be used on 'standard' toilets with access below the toilet pan.



Examples of Bottom Fix toilet pans.

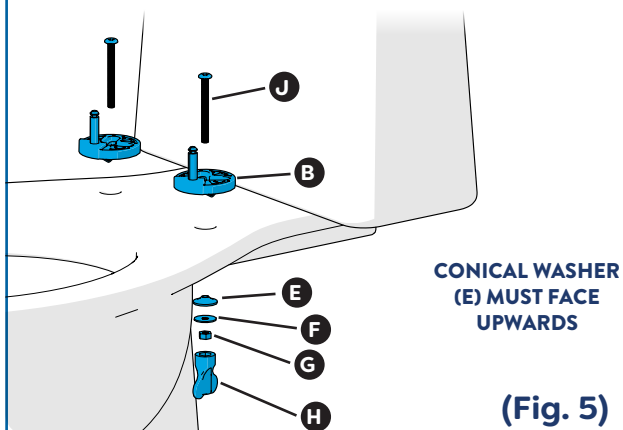


TOP FIX INSTALLATION

This installation is designed to be used on 'back to wall' toilets with no access below the toilet pan.



Examples of Top Fix toilet pans.

OR

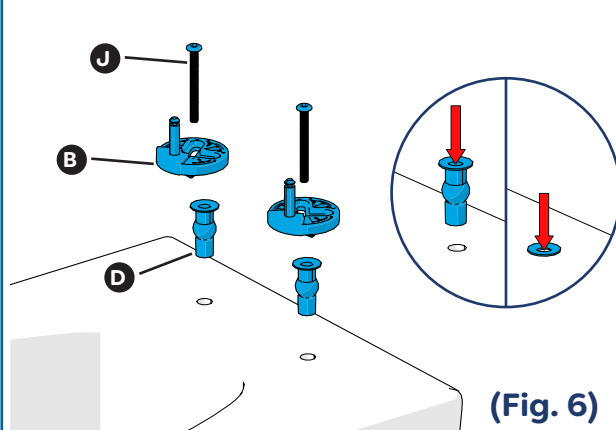


11. Slide the spacer (K) onto both flexi fix bracket (B) pillars, using either the inner or outer holes. Rotate the flexi fix brackets (B) if necessary.

(See Fig.7)

Note: The four holes can be used for this toilet seat. If you find your toilet seat does not match the profile of the pan, try using the alternate holes.


fig. 7

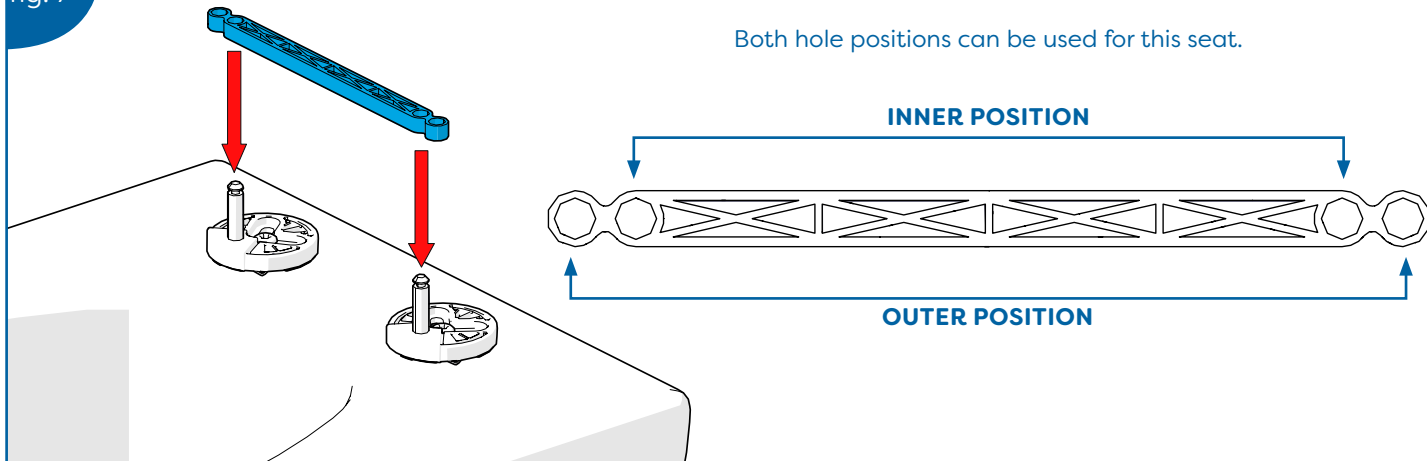


12. Position the seat on the pillars and rest it on the spacer (K).

(See Fig. 8)


fig. 8

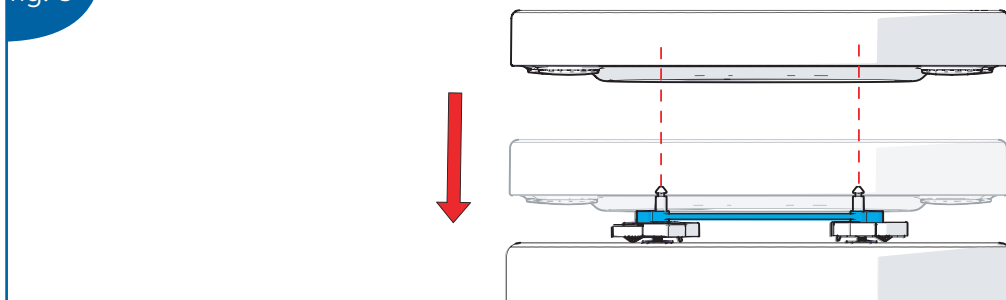


- 13.** Align the seat with your toilet pan by rotating and sliding the flexi fix brackets (B). If required, lift the seat off the pillars to help with the adjustment. (See Fig. 9)
IMPORTANT! Ensure that the front buffers contact the pan.

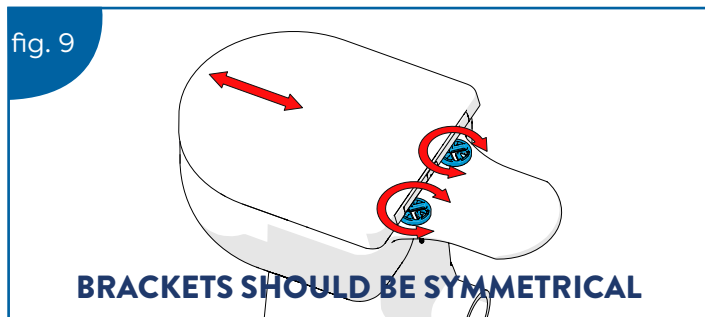


- 14.** When the desired position of the seat has been achieved, apply firm pressure on both flexi fix brackets (B) so the adhesive pad makes contact with the pan.
Hold down for 20 seconds. (See Fig. 9)

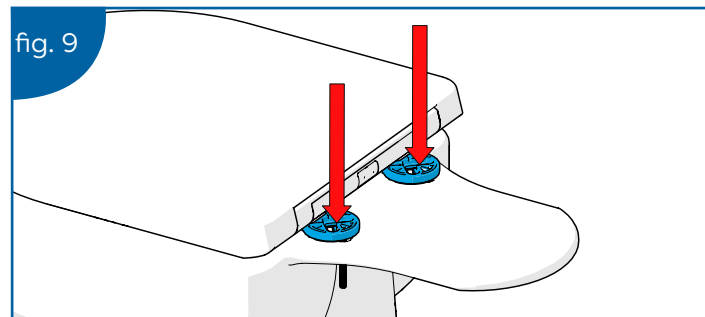


- 15.** Carefully remove the seat **without disturbing the bracket positions** and fully tighten the screws (J) to firmly secure the hinge brackets. (See Fig. 10 and 11). **Do not to over-tighten.**

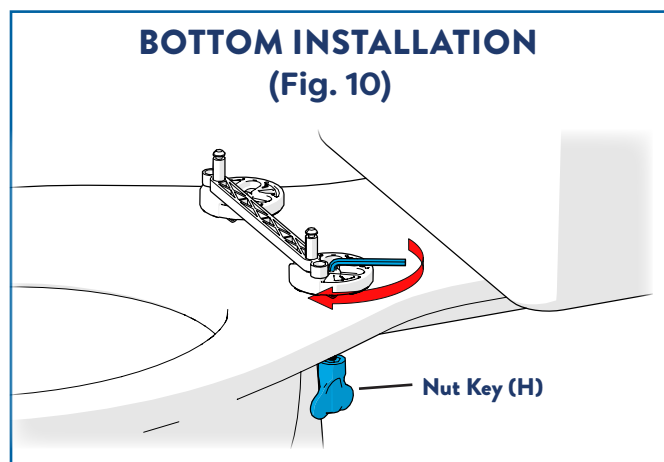


OR

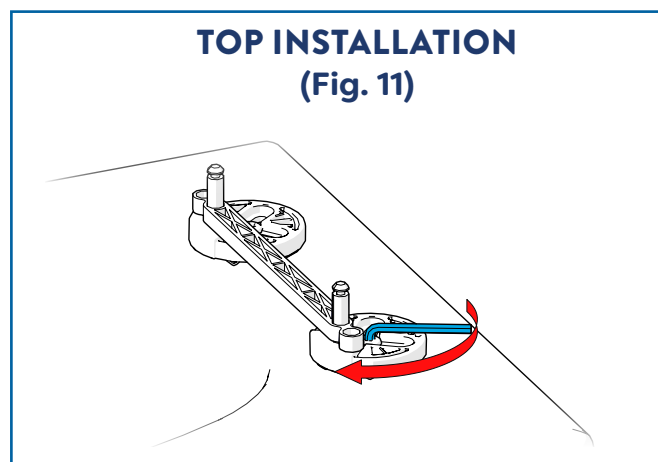


- 16.** Remove the spacer from the flexi fit brackets (B). (See Fig. 12)

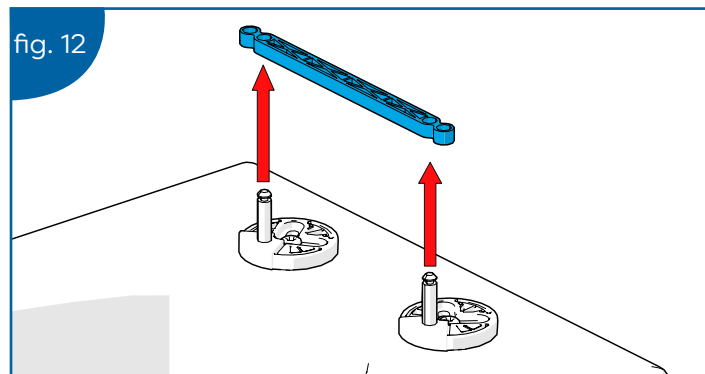

- 17.** Place the chrome caps (A) onto the flexi fix brackets (B). (See Fig. 13)

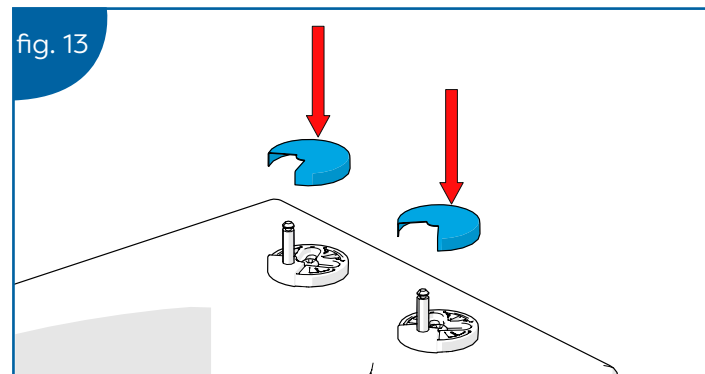

- 18.** Attach the seat onto the flexi fix brackets (B) to complete the installation. You will hear an audible click to confirm it is engaged. (See Fig. 14)

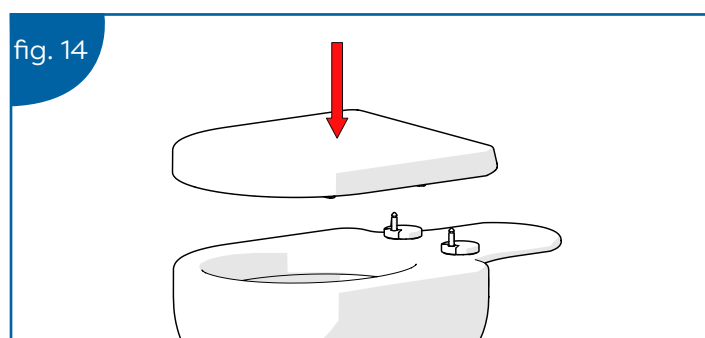

- 19.** To activate the quick release function, press and hold the button, then lift the seat away. (See Fig. 15)
IMPORTANT! When cleaning, ensure that this button is not accidentally activated. See point 4 in "Safety & Product Care"

